

## CONSTANT VOLTAGE LED DRIVER INSTALLATION GUIDE

### BEFORE YOU BEGIN

This driver is to be installed in accordance with Article 450 of the National Electric Code. The driver must be installed in a well-ventilated area free from explosive gases and vapors. Proper operation requires for free flow of air. As this driver is hardwired it should only be installed by a qualified electrician.

#### Precautions Before Installing

- Check the label and ensure the driver has the proper input voltage and wattage for the job. Check the wire markings to ensure they match the wiring diagram on this installation guide.
- If the product has any visible damage do not install it.

#### Mounting

Select a suitable location capable of supporting the weight of the driver. Use the keyholes in the driver case.

#### Input Connections / Grounding

First, remove the input wiring cover and install the clamp connectors. With power turned off, route the input wires and make connections according to the wiring diagram below. For all wire connections use only UL listed wire nuts and connectors of suitable size and type. The driver **MUST** be grounded in accordance with the N.E.C.

#### Output Connections

First, remove the output wiring cover and install the clamp connectors. With power turned off, route the light fixture wires and make connections according to the wiring diagram below.

#### Quick Specs

Input Voltage Range	120 - 277VAC ± 10%
Input Frequency	50 / 60Hz
Operating Ambient Temperature	-25°C - 40°C
Env. Protection Rating	IP65

