## INSTALLATION INSTRUCTIONS

### MODELS: VarioContour 5560 Aluminum Profile

# LED LINEAR™ lighting solutions

#### **ATTENTION**

#### Please read all safety and assembly instructions prior to installation and keep for future reference.

- 1. Product should be installed by a qualified electrician with regards to all applicable electrical and safety standards.
- **2.** Ensure power is shut off at the electrical panel prior to installation in order to prevent electrical shock.
- 3. Use only with SELV (Safety Extra Low Voltage)/Class 2 power supplies.
- 4. Suitable for installation in Dry Locations.
- **5.** Avoid looking directly into the light source during operation glare hazard.
- 6. Do not store packed units over 70° F and over 50% humidity more than 12 months.










#### NOTE

Prior to installation, always test the LED tape with a suitable power supply in order to confirm operation and that the factory connections are secure. LED Linear only honors warranty for supplied material and is not liable for installation errors.


## ALUMINUM PROFILE INSTALLATION




Thoroughly clean the area where tape lights will be installed. Using a 50/50 alcohol mix, clean the area where LEDs will be applied and allow time for alcohol to dry for 5 minutes.

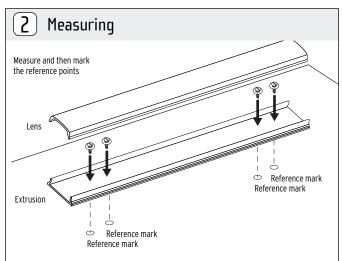

Align the mounting channel to the determined location. Mark reference points to install to the surface. The location of the power supply or wiring box should be determined prior to installation.

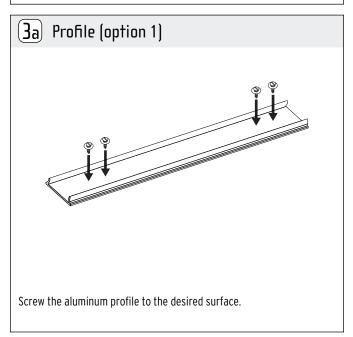

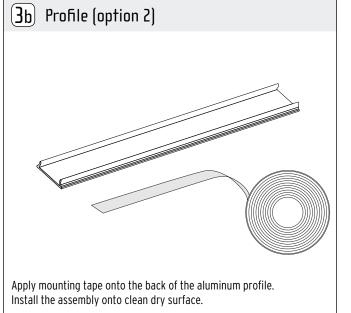

# INSTALLATION INSTRUCTIONS


MODELS: VarioContour 5560 Aluminum Profile





#### **ATTENTION**

Please read all safety and assembly instructions prior to installation and keep for future reference.



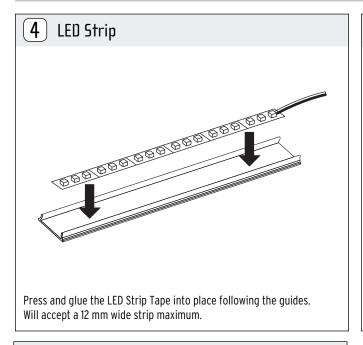

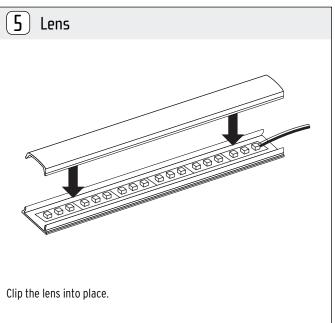

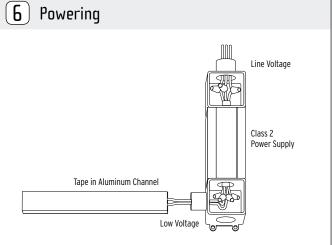

Ensure the correct (wattage & voltage) power supply is used to power the tape. Then proceed to connect low voltage wires from extrusion to power supply. For more information please refer to power supply and LED tape wiring instructions.